

SUPPORT NOTE

5 NOVEMBER 2013

GEO 7X HANDHELD: POWER/HOME BUTTON BEHAVIOR

The following table describes the behaviors of the Trimble® Geo 7X handheld **Power / Home** button.



If device is...	doing this to the Power /Home button...	has this effect:
Off/Suspended	Short press	Starts/resumes the device
On	Short press	Displays the <i>Home</i> screen
On	1 second press	Suspends the device
Not responding	Long press (8 seconds)	Performs a soft reset
Not responding	Very long press (> 10 seconds)	Performs a hard reset

This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.

Geospatial Division, 10368 Westmoor Drive, Westminster, CO 80021, USA

© 2013, Trimble Navigation Limited. All rights reserved. Trimble and the Globe & Triangle logo are Trademarks of Trimble Navigation Limited registered in the United States and in other countries. All other trademarks are the property of their respective owners. 29269 (11/13)

