

SUPPORT NOTE

5 NOVEMBER 2013

GEO 7X HANDHELD: VERIZON™ NETWORK ACTIVATION

SUMMARY

By default, the Trimble Geo 7X handheld's integrated modem is set to connect to GSM/UMTS networks with a SIM card. The handheld is also certified for use with the US cellular network operator Verizon operating in CDMA/EV-DO mode. The handheld can not be used on other CDMA/EV-DO networks.


To use the Geo 7X handheld on the Verizon network, you must:

- have an account with Verizon.
- register the handheld with Verizon to enable it to connect to the network.

PROCEDURE

To register the handheld with Verizon:

1. Provide the handheld's MEID (unique cell radio identifier) to your Verizon account contact. To find the MEID for your Geo 7X handheld, do one of the following:
 - look on the MEDI/IMEI label on the back of the handheld (the MEID is the first 14 digits)
 - make sure the phone is turned on (in the *Geo 7 Series User Guide*, see *Using the Wireless Manager* for more information), then tap *Start / Settings / System / System Information / Modem*.
2. Once the handheld has been registered on the Verizon network (this can take a couple of days, check with your Verizon contact), enable and activate CDMA on the handheld.

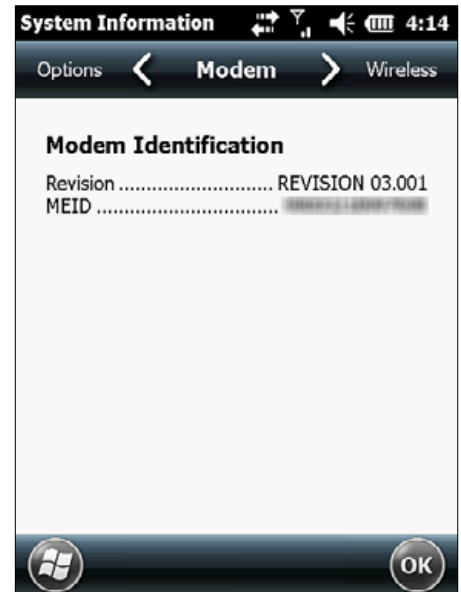

This document is for informational purposes only and is not a legally binding agreement or offer. Trimble makes no warranties and assumes no obligations or liabilities hereunder.

Geospatial Division, 10368 Westmoor Drive, Westminster, CO 80021, USA

© 2013, Trimble Navigation Limited. All rights reserved. Trimble and the Globe & Triangle logo are Trademarks of Trimble Navigation Limited registered in the United States and in other countries. All other trademarks are the property of their respective owners. 29284 (11/13)



To enable CDMA operation on the handheld:

Important: The activation step requires that the handheld be able to connect to the Verizon network during the activation sequence. Check your location's Verizon network coverage using the Verizon Coverage Locator:

<http://www.verizonwireless.com/b2c/support/coverage-locator>

1. Tap *Start / Settings / Personal / Cellular Network*.
2. From the *Network Type* dropdown list, select CDMA, then tap **OK**. The modem resets and reinitializes in CDMA mode.
3. To activate CDMA, make the phone is turned on, and connected to the Verizon network in an area of good coverage (the signal-strength indicator should show at least two bars). Tap *Start / Settings / Personal / Cellular Network* and then click **Activate**.

A pop-up message indicates that activation was successful. This may take several minutes.

